



OXXO DOOR ASSEMBLY

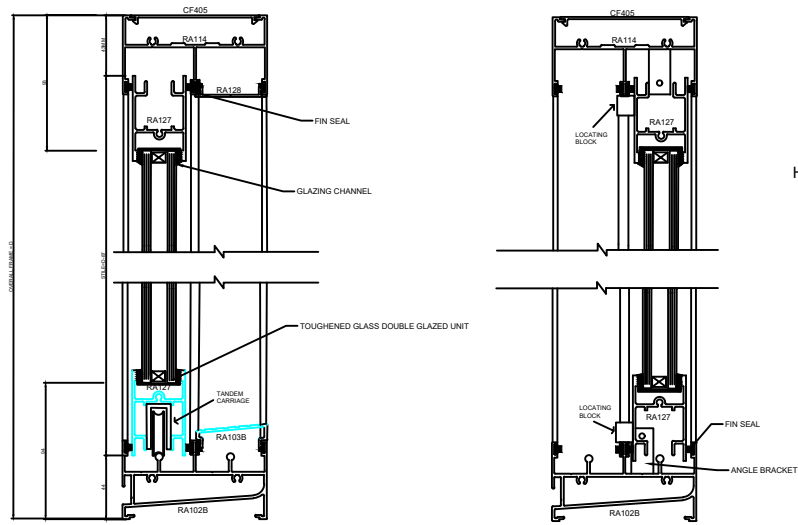

HEIGHT FORMULA FOR OXXO DOOR


JAMB = TOTAL HEIGHT  
 LOCK STYLE = H - 87  
 INTERLOCKS = H - 87  
 GLASS = H - 187

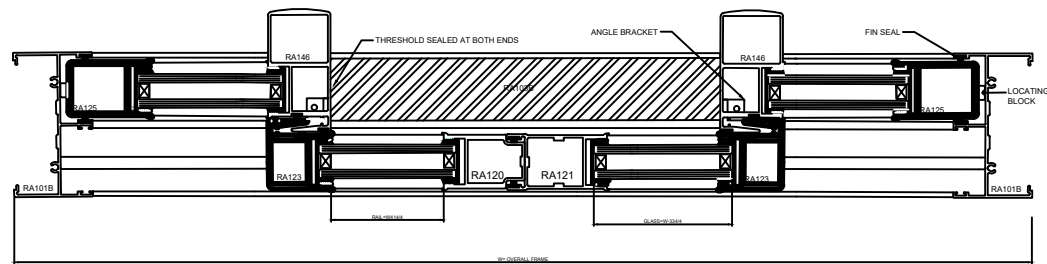

WIDTH FORMULA FOR OXXO DOOR


HEADSILL = W - 55  
 RAIL = (W - 414) / 4  
 GLASS = (W - 136) / 4  
 THRESHOLD RAILER = (W - 174) / 2  
 HEADTRACK COVER = (W - 174) / 2

XO DOOR ASSEMBLY

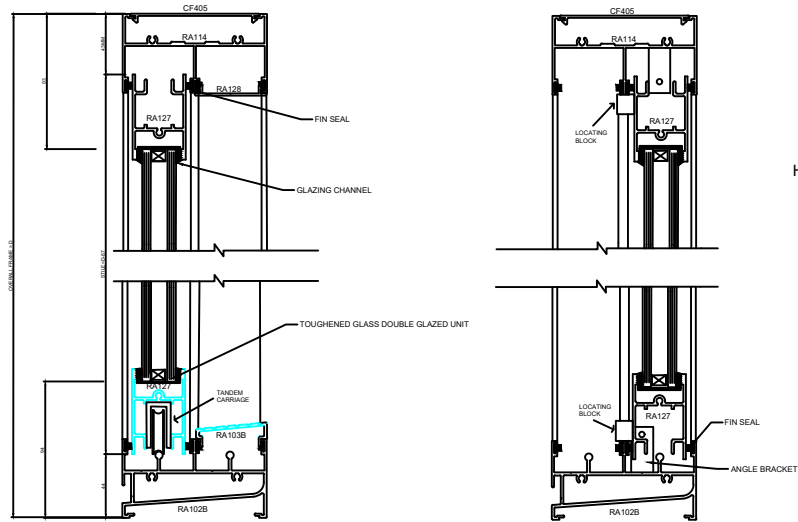


HEIGHT FORMULA FOR XO DOOR

JAMB = TOTAL HEIGHT  
 LOCK STYLE = H - 87  
 INTERLOCKS = H - 87  
 GLASS = H - 187

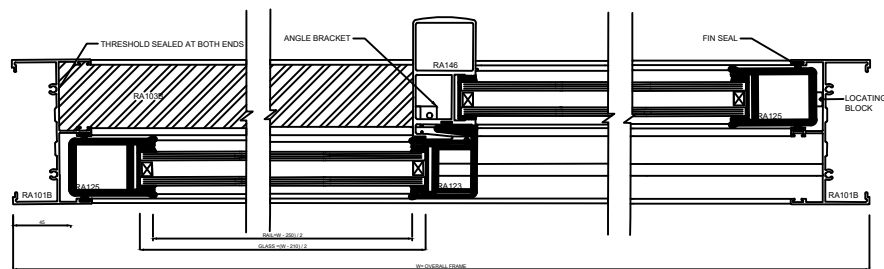


WIDTH FORMULA FOR XO DOOR

HEADSILL = W - 55  
 RAIL = (W - 205) / 2  
 GLASS = (W - 210) / 2  
 THRESHOLD RAILER = (W - 112) / 2  
 HEADTRACK COVER = (W - 112) / 2

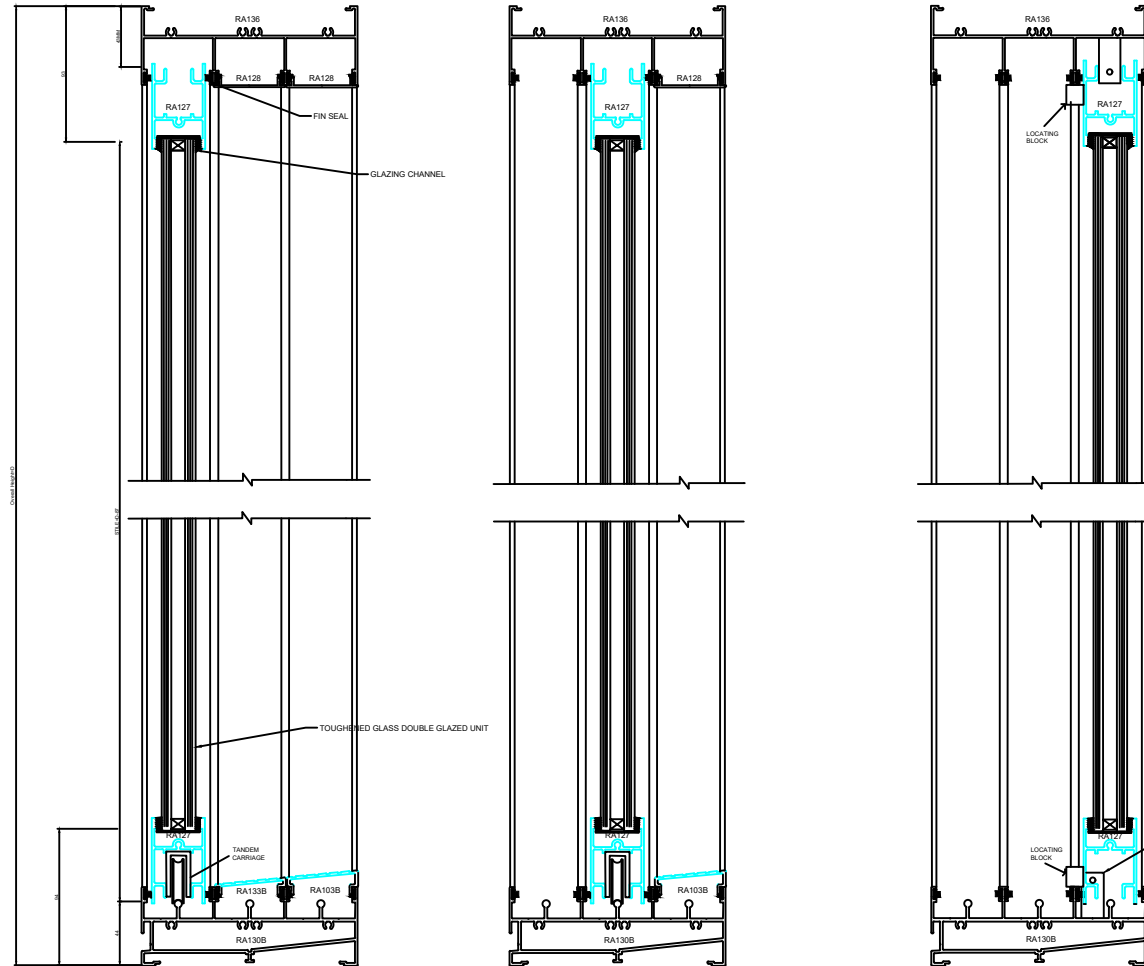

HEIGHT FORMULA FOR XXO DOOR

JAMB = TOTAL HEIGHT  
 LOCK STYLE = H - 87  
 INTERLOCKS = H - 87  
 GLASS = H - 187

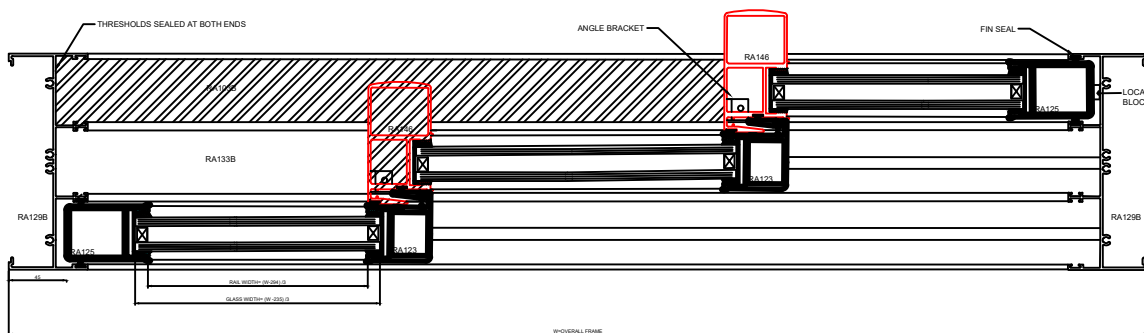

WIDTH FORMULA FOR XXO DOOR

HEADSILL = W - 55  
 RAIL = (W - 204) / 3  
 GLASS = (W - 230) / 3  
 THRESHOLD RAILER = (W - 112) / 2  
 HEADTRACK COVER RA128 = (W - 112) / 2  
 HEADTRACK COVER RA128 = (W - 123) / 3.2